

METRIA

Operation Manual for IN/OUT Temp. & Humidity Meter

Model No. **HC-520**

1 General Description:

HC-520 IN/OUT Temperature & Humidity Meter is characterized as:

- * multi-function
- * low power consumption
- * high stability & accuracy
- * memory of last measuring value

2 Features:

- * INDOOR and OUTDOOR temperature measuring
- * display temperature and humidity simultaneously
- * MIN and MAX value recording
- * Comfortable degree symbol
- * °C/°F unit selectable
- * Desk-top placing or Wall Hanging

3 Specification:

* **Temperature range:**

IN side temperature: -10~+50°C (+14~+122°F)

OUT side temperature: -50~+70°C (-58~+158°F)

* **humidity range:** 20%~99%RH

* **resolution:**

temperature: 0.1°C (0.1F)

humidity: 1% RH

* **accuracy:**

temperature: ±1°C (-20~60°C) , ±2°C (other)

humidity: ±5%RH (20%~99%, at 25°C)

* **power supply:** 1.5V (AAA size) x 1

* **product dimension:** 78 x 98 x 17 mm

* **weight:** Approx. 95g

* **storage condition:** -20°C~60°C, 20~80%RH

4 Button function:

- * Push 'IN-OUT' button to select to show INSIDE or OUTSIDE temperature (IN or OUT will be indicated on LCD screen)
- * Push 'MAX-MIN' button to show recorded MAXIMUM or MINIMUM temperature and humidity value (MAX or MIN will be indicated on LCD screen)
- * Push '°C/°F' button to change temperature display unit
- * Push 'RESET' button to make all set and recorded values to the original ones

5 Operation:

5-1 Install battery and start the meter

- [a] take off the battery cover according to the arrow indicated on it
- [b] install 2 x 1.5 VV (AAA size) battery strictly according to the NEGATIVE and POSITIVE symbol indicated inside the battery compartment
- [c] push on the battery cover, the meter then starts to work

5-2 INSIDE and OUTSIDE house temperature measuring

- [a] Push the sensor wire plug into the socket under battery cover and place the sensor out of the house
- [b] push 'IN-OUT' button to select to show INSIDE or OUTSIDE temperature (IN or OUT will be indicated on the left side of TEMP. value)

Note:

- [a] This meter can only measure INSIDE house humidity (IN is always shows above the humidity unit symbol %)
- [b] If the sensor wire for OUTSIDE temperature is not installed to this meter, the meter can only show INSIDE temperature

5-3 Environmental Comfort Status Indicating

The meter can automatically indicating Environmental Comfort Status basing on the humidity and temperature value it measures, it will indicates 3 kinds status according to the below chart:

Symbol Indicated for Comfort Status	temperature	humidity	meaning
COM	20~25°C (68~77°F)	40%~70% RH	comfortable
WET		>70% RH	wet
DRY		<40% RH	dry
No Symbol	>25°C (77°F) <20°C (68°F)	40%~70%RH	Not comfortable scope (Humidity 40~70%)

6. CAUTIONS:

- * Please do not use this meter under strong vibration or high temperature and bad weather condition**
- * Please do not use this meter by AC power**
- * Please do not use OLD and NEW battery simultaneously.**
- * Please do not put the sensor wire in condition of temperature over 70°C**
- * To protect environment, please put the used battery in the places Government indicates.**